

# CONCEPT ARES 21

## SWIMMING



**3330.560.02**

Version 3.30  
Edition April 2008



---

**TABLE OF CONTENTS**

---

<b>1 .... INTRODUCTION .....</b>	<b>1</b>
1.1 Preface .....	1
1.2 Connection to the IF-ARES .....	1
1.3 General.....	1
1.4 Step by step .....	2
<b>2 .... SYNCHRONIZATION .....</b>	<b>3</b>
<b>3 .... CONFIGURATIONS .....</b>	<b>4</b>
3.1 Pool Configuration .....	4
3.1.1 <i>Connection to the harness</i> .....	5
3.2 Timing precision .....	6
3.3 Language .....	6
3.4 Reaction times.....	6
<b>4 .... THE TEST WINDOW.....</b>	<b>7</b>
4.1 Disconnect the harness.....	7
<b>5 .... TIMETABLE DIALOG .....</b>	<b>8</b>
5.1 Editing a competition .....	9
5.2 Editing the Start lists.....	10
5.2.1 <i>Editing a competitors name</i> .....	10
5.2.2 <i>Editing the competitors table</i> .....	11
5.2.3 <i>Changing the order of a start list</i> .....	11
5.3 Race dialog .....	11
5.3.1 <i>Select the active side</i> .....	12
5.3.2 <i>Popup menus for the lanes</i> .....	12
5.3.3 <i>Arm the lanes</i> .....	13
5.3.4 <i>Arm the start</i> .....	13
5.3.5 <i>Manual start</i> .....	13
5.3.6 <i>Manual time</i> .....	14
5.3.7 <i>Arming delay</i> .....	14
5.3.8 <i>Lane options</i> .....	14
5.3.9 <i>Next heat and next event</i> .....	15
5.3.10 <i>Actions during a race</i> .....	15
5.3.11 <i>Retrieve race</i> .....	16
5.4 Result dialog.....	17
5.4.1 <i>Copy and paste results</i> .....	17
5.4.2 <i>Available configurations</i> .....	17
5.4.3 <i>End of Race Options (printed results)</i> .....	18
<b>6 .... RECORDS OPTIONS.....</b>	<b>19</b>
6.1 Editing the records table.....	19
6.2 Edit the record from the race dialog .....	19
6.3 Updating a record.....	19
6.4 The record output dialog .....	19

© Copyright. Reproduction in any manner whatsoever without the written permission of Swiss Timing Ltd. is strictly forbidden.

© Copyright. Reproduction de toute façon quelconques sans permission écrite de Swiss Timing Ltd. est strictement interdit.

© Copyright. Wiedergabe in jeder Weise ohne die schriftliche Erlaubnis von Swiss Timing Ltd.. Ist ausschließlich verboten

**SWISS TIMING LTD**

A COMPANY OF THE **SWATCH GROUP**

P.O. Box 138, rue de l'Envers 1  
2606 Corgémont, Switzerland  
[www.swisstiming.com](http://www.swisstiming.com)

Phone +41 32 488 36 11  
Fax +41 32 488 36 09  
[info@swisstiming.com](mailto:info@swisstiming.com)

---

6.5	Record split times.....	20
<b>7</b>	<b>.... EVENT DIALOG .....</b>	<b>21</b>
<b>8</b>	<b>.... SCOREBOARD .....</b>	<b>23</b>
<b>9</b>	<b>.... DH CONTROL .....</b>	<b>25</b>
9.1	Data Handling Options (from version 2.15) .....	25
9.1.1	<i>DH Connection via the ARES PC secondary com port .....</i>	<i>26</i>
9.1.2	<i>DH Connection to the IF-ARES GP port.....</i>	<i>26</i>
<b>10</b>	<b>. GALACTICA SCOREBOARD .....</b>	<b>27</b>
<b>11</b>	<b>. ERTD SCOREBOARD .....</b>	<b>27</b>
<b>12</b>	<b>. TEXT MODIFICATION .....</b>	<b>28</b>
12.1	Text modification of the definition of competition .....	28
12.2	Text modification of interface .....	28
<b>13</b>	<b>. GLOSSARY .....</b>	<b>29</b>

# 1 INTRODUCTION

## 1.1 Preface

Welcome to the ARES-21 world !

This document is intended to ease your first introduction to ARES-Swimming. It has a description of the main dialogs used in the program. Additionally, there are comments on how to get the most of the program.

This document was made using software version ARES Swimming 2.04.  
It means that you can have some differences with your own program features or dialogs.

## 1.2 Connection to the IF-ARES

The connection to the IF-ARES is done by an RS-232 cable.

At start, the program checks if the IF-ARES is connected, and a message box appears if no connection can be made. If this message box appears, the causes can be:

- The IF-ARES has NOT been switched on.
- The cable is not connected.
- The cable is connected to the wrong serial port. In this case, you can either move the cable or select another port from the PC software.

If the program has found the IF-ARES, it launches the swimming module and the red LED on the IF-ARES starts to blink. If another module is already active on the IF-ARES, you will be asked to switch it off and on again.

## 1.3 General

### On-line Help:

- Press F1 from any ARES-Swimming window to get the on-line help.

### Keyboard accelerators in a dialog that is active (usually with a highlighted title bar):

- Use the WINDOWS method for the controls (buttons, checkbox...) that have an underlined character in their text.

**Example:** Race is accelerated by depressing the keys <ALT> and <c> at the same time.

- Use the key combination for those controls or menu items that are followed by <xxx>.

**Example:** Next Heat <Ctrl N> is accelerated by depressing the key <Ctrl> and the key <N> at the same time.

Keyboard accelerators in a dialog that may be active:

- The accelerators that are active wherever you may be in the ARES-Swimming application can be recognized by a '!'.

**Example:** !<Ctrl F12> is an accelerator that is always available.

### **Main window**

The main window has only a list of menus. When it is minimized, all the other windows of the program are also minimized.

### **Change directory**

This dialog is accessed from the ARES-Swimming window, with the menu <File → Change data directory>

The dialog <Change data directory> lets you decide where all the data will be stored.

We recommend you to create a new directory for each day of competition. This will make it easier for you to work with competitions with large entries or several competitions at one time. This will also help maximize the program response times to file functions. To make a backup of a whole day of competition, copy all the files from this directory.

When moving to an empty directory, all the tables and configuration details are taken from the default directory (ares\swimm). It may be convenient to get some tables such as competitors or the records table from the previous data directory. This can be done by checking the table copy checkbox.

## **1.4 Step by step**

At first:

1. Synchronization of the IF-ARES (chapter [2](#))
2. Check or set the configuration of the pool (chapter [3.1](#))

Preparing a timetable:

1. Edit the competitions (chapter [5.1](#))
2. Edit the competitors table (optional) (chapter [5.2](#))
3. Edit the start lists (optional) (chapter [5.2.2](#))

Process a race:

1. Select the heat in the timetable and connect it to the <Race dialog> (<Race> or a double click on heat) (chapter [5.3](#)).
2. Process the race.
3. Check the final results on the <Result dialog> (chapter [5.4](#)).
4. Press <End of Race> (for printing) (chapter [5.4.2](#)).
5. <Next heat> or <Next event> or quit the <Race dialog>.

## 2 SYNCHRONIZATION

The synchronization dialog box is accessed from the ARES-Swimming window, menu <IF-ARES → Synchro>.

It is used to set the day time on the IF-ARES.

You should synchronize the IF-ARES each time it is switched on.

If you don't, the first impulse on the start input will automatically synchronize it at 0:00.

The IF-ARES can only be synchronized once. If it has already been synchronized, either restart it, or quit the synchro dialog.

It is important to have a correct day time in the IF-ARES because:

- The start impulses are recorded as a day time.
- If there is a backup system, they should have the same time.

### Source:

- Direct : the IF-ARES will be synchronized when you press <GO>.
- Start : the IF-ARES will be synchronized when an impulse occurs on the start input.
- Synch : the IF-ARES will be synchronized when an impulse occurs on the synch input.


### How to process:

1. Launch the synchro dialog box.
2. Enter the time in the entry fields (an empty entry field means 00).
3. Select the means of synchronization.
4. Press Go.
5. Wait for the trigger event to occur (if not direct).

### 3 CONFIGURATIONS

The configurations available from the main window are:

- Select the data directory.
- Configuration of the pool.
- Timing precision.
- Select the language and keyboard.
- Select the serial line.
- Scoreboard setup.
- Set Actions to do at end of race.
- Record detection and updating.
- Warning and display timer configuration for lanes.
- Competition with or without reaction times.
- Advanced sending data for scoreboard.

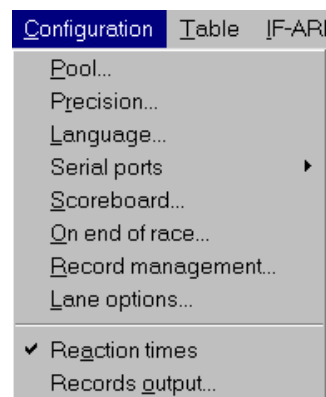

#### 3.1 Pool Configuration

This dialog is accessed from the ARES-Swimming window, with the menu <Configuration → Pool>.

##### Connection of the harness:

The first three comboboxes describe the position and the connections of the harness to the IF-ARES.

1. Select which harnesses are connected and on which side.
2. Select which harness is connected to the Near End (HA1) input of the IF-ARES.
3. Select which side is the finish (or in some cases where all the starts are done).

These three entries are closely related.

##### Numbering of the lanes:

The other two columns describe the relations between the number of a lane module along the harness and the lane number (written on the start platform).

1. Select the order of the modules along the harness.
2. Select the order of the lanes along the pool.

These two entries are closely related.



**Example 1:**

A pool with 8 lanes numbered from 1 to 8.

The module 1 is on lane 1, module 2 is on lane 2, and so on...

Module order: <1 2 3 4 5 6 7 8>

Lane order: <1 2 3 4 5 6 7 8>

Use the factory setting button < 8 / 8 >

**Example 2:**

In a 10 lanes pool that is set as an 8 central lane pool:

The module 1 is not used, but the module 2 is set for lane 1 and so on...

Module order: <2 3 4 5 6 7 8 9 >

Lane order: <1 2 3 4 5 6 7 8 >

Use the factory setting button < 8 / 10 >

It is recommended to test these settings with the test window (launched by the test pushbutton).


Please work with a partner who presses every contact and checks on the test window if it is correctly done.

**3.1.1 Connection to the harness**

This dialog is accessed from the <Pool configuration> with the button <Contacts>.

Lanes connections:

Normal configuration with a touchpad, a platform and a backup button (for a Swiss Timing Interface).

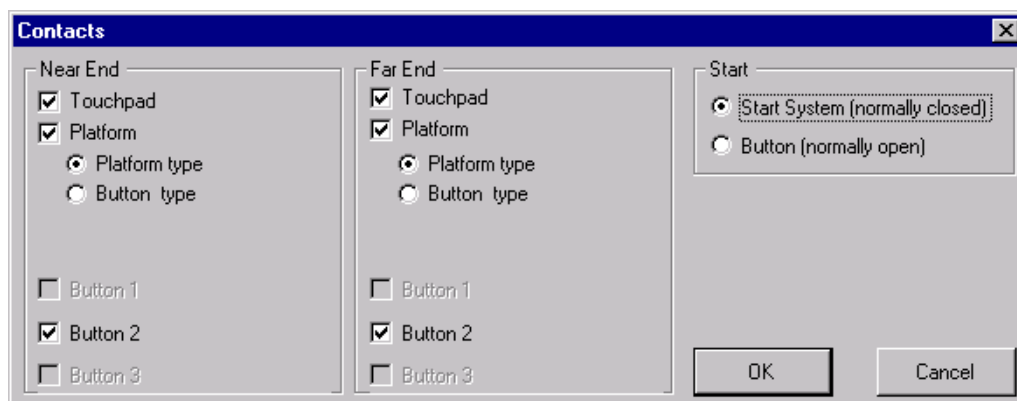

For configuration with 3 buttons, the official time is the middle one (according to FINA rules)

---

With Daktronics interface you can use 3 buttons for the backup time, so the intermediate time shall be the official backup time. If only two buttons are available, the official backup time shall be the average of those two buttons. If only one button is available, the time of that button shall be the official backup time.

#### Start connection:

You can also set the type of your start system (Standard Start Systems are normally closed).

<b>Note:</b> The start contact configuration is checked when the synchronization (chapter 2) is done by the start.
--

### **3.2 Timing precision**

This dialog is accessed from the <ARES-Swimming> window, with the menu <Configuration → Precision>.

The timing precision can be changed here and will affect any subsequent acquisition of times.

### **3.3 Language**

The language selection is used to change the program texts (menus, button, ...).

<b>Note:</b> The texts for the style, length, round and category of a competitions are only changed when changing to a new data directory.
--

The keyboard selection is used to change the accelerators.

### **3.4 Reaction times**

This option enables the detection of the start reaction time.

The reaction times appear on the <Race dialog> and are also sent to the SCB and the GP outputs.

## 4 THE TEST WINDOW

This is a tool that helps you check that the configuration is correct. This dialog is accessed from the <ARES-Swimming> window, with the menu <Configuration → Precision → Test>.

This window displays in large characters the number of the lane that has been activated.

The contacts (touchpad, platform and button → Glossary, chapter 13) are also displayed.

When a touchpad on the finish end has been activated, the sides of the window become black.

When a touchpad on the opposite end to the finish (e.g. 50m) has been activated, the sides of the window are half black, half white.

Lane entry: lets you select which lanes should be tested.

Enter '\*' for all lanes

Enter '2 3' for lanes 2 and 3

...

Hold time entry: lets you choose how long (in seconds) the number of the lane should be displayed.

Enter '2' for displaying a number for 2 seconds.

Enter '0' to prevent the number from being erased before the next touch.


### 4.1 Disconnect the harness

This function is available from the 'Race dialog' with <Windows → Timetable(F8) → Race → Options → Enable Harnais>

In order to make some connection tests with some external system (SCB or data handling) whilst some swimmers are 'warming up', it is possible to ask the program to disconnect the harnesses by software.

<p><b>WARNING:</b> in this mode, no events are received from the poo. This function should be used only for tests.</p>
--

## 5 TIMETABLE DIALOG

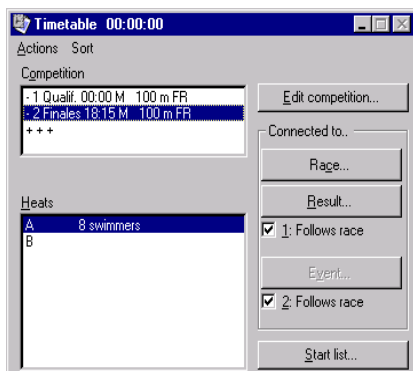

This dialog is accessed from the <ARES-Swimming> window, with the menu <Windows → Timetable (F8)>.

From this dialog, you can start various actions from pushbuttons:

- Edit a competition (select event number, distance, style, etc.). A competition is a group of heats.
- Edit the start list for the selected heat.
- Launch the race dialog for the selected heat.
- Connect a competition to the <Results dialog>.
- Connect a competition to the <Events dialog>.

Usually, the heat that is on the race dialog is also connected to the classify and events dialogs.

In certain circumstances, such as to print or to review the events of a previous race, you may want to connect to the <Results dialog> a heat other than the current one. This can be done by unchecking the <1: follows race> box.

From the menu, you can:


- Delete a heat.
- Delete a whole competition.

You will get a message box to confirm the deletion.

<b>Notes:</b>	You can edit a competition by double clicking on it in the competitions listbox. You can launch the race by double clicking on it in the heats listbox.
---------------	--

- Import startlist from *Meet Manager software* for the selected competition and heat. It is only available if a computer running *Meet Manager* is connected to the GP port of the ARES.

## 5.1 Editing a competition

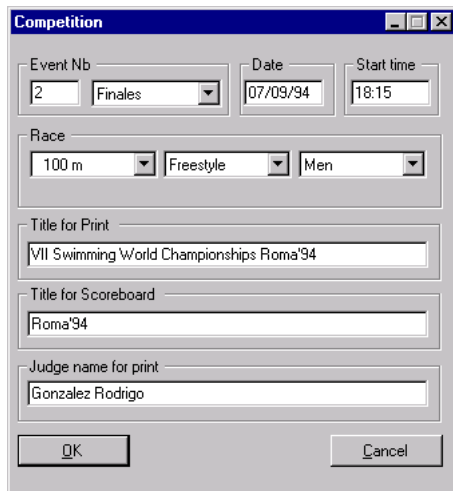

To get the <Editing a competition dialog>:

- Be sure the timetable is active.
- To edit a new competition, select the line < +++ > in the competition listbox and press the <Edit competition> button.
- To edit an existing competition, select it in the competition listbox and press the <Edit competition> button.

The event number and the round:

- for an existing competition, they cannot be changed.
- for a new competition, if they are the same as an existing competition, the <OK> pushbutton will be disabled.

The length, style and category:

- they are used for a correct setting for the number of laps, records, and prints.
- the length, style and category values can be changed.

The date, time and title:

- they are only used for the printed results.

Title line for the prints:

- the first title line is used for the printed results.

Title line for the scoreboard:

The second title line is sent to the scoreboard depending on the scoreboard Type. For more information about the SCB outputs, see Scoreboard, chapter 8.

---

Some automatic fields may be inserted. They are:

%0: Event number.

%1: Round.

%2: Heat number.

%3: Category.

%4: Length.

%5: Style.

**Example:**

Using these automatic fields, it is possible to edit a title as in the following example:

Race: %0-%2, %1 --- %3 %4 %5

The above title line will be sent to the scoreboard as:

Race: 18-A, Final --- Men 100m Freestyle

**Official judge name:**

The official judge name is meant for the printed results. The name that is edited in this field will replace the name that has been set into the ARES-Print Utility.

## **5.2 Editing the Start lists**

To edit a start list, select the competition and the heat on the timetable dialog box and click the <start list> button.

The competitors are taken from the competitor table. Click the <Add> button, to obtain the competitors table.

The competitors are inserted at the selected entry in the list box of the start list edit dialog.

From the competitors table, select a competitor with double click (or press the <Enter> key) for entering into the start list.

### **5.2.1 Editing a competitors name**

Use this dialog to update or insert names in the competitors table.

**<Id>:** This is a number used by the software that uniquely defines every competitor.

**<Bib>:** This is an optional identification number or text.  
It can be the id, can be left empty, or can take the value assigned by an external data handling, to ensure the coordination between the two systems.

Press <ESC> to quit this dialog.

### 5.2.2 Editing the competitors table

To edit the competitors, go to the ARES-Swimming window, menu <Table → Competitors Table → Edit>.

To add or modify a competitor, go to the competitors list, click on the <Edit> button to add or modify a competitor.

To add a new competitor, select a new bib number or an empty bib number.

To modify a competitor, select his bib number.

### 5.2.3 Changing the order of a start list

This dialog is accessed from the <Start list> dialog, with the button <Reorder>.

A competitor is sent to the start list with double click on it.

The competitors may be sent in any order.

This dialog is accessed from the <Start list> dialog, with the button <Reorder>.

A competitor is sent to the start list with double click on it.

The competitors may be sent in any order.


## 5.3 Race dialog

The configurations available from the race dialog are:

- The lane options.
- Arm delay.

This dialog is accessed from the Timetable window, with the button <Race>.

The race dialog must be launched to process a competition. You do not need to quit this dialog to obtain the next heat.

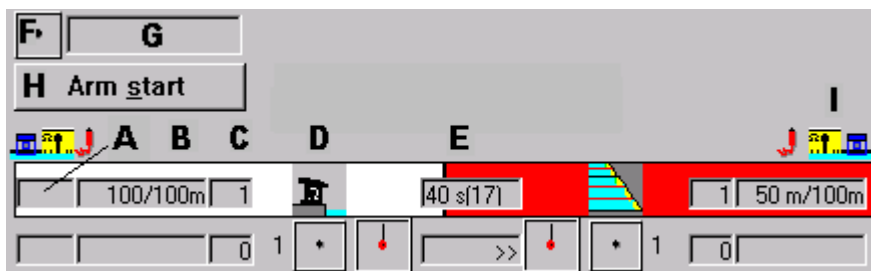

---

On title lane:

- A) Shows the reaction Time
- B) Indicates the lap distance on the total distance for each side
- C) Number of lap expected for this side
- D) Stage of race (start, intermediate, finish)
- E) Displays the arm delay

On the other lanes:

- A) Relay or reaction times
- B) Times
- C) Number of laps done
- D) Status of the touchpads (See Arm the lanes)
- E) Direction expected and rank

Start:

- F) Arm status
- G) Running time
- H) Arm start button

Configuration:

- I) Shows the contacts configuration for each side.

**Note:** There is a keyboard accelerator for the main functions and to select the popup menus (numbers 1 to 0, 0 is the 10<sup>th</sup> lane).

### **5.3.1      *Select the active side***

For a two harness configuration:

- The active side has a red background.
- The active side is the one that reacts to actions, for instance an <arm All lanes>.
- Selection of the active side is done by clicking the mouse on a side of any lane, or through the <Actions → toggle side selection <Space> menu.

For a one harness configuration:

There is only one active side, i.e. the finish side.

### **5.3.2      *Popup menus for the lanes***

Popup menus for the lanes appear by either right clicking on the time field for each lane, or by pressing the number of the lane (press 0 for lane 10).

For a two harnesses configuration, the popup appears on the selected active side.

The lane that has the popup menu is grey.



### 5.3.3 *Arm the lanes*

Usually the lanes are automatically armed after the arming delay (user selectable). But you can override this property by selecting arm On or arm Off.

arm ON: all the lanes should be ready to accept a touch.

arm OFF: none of the lanes will accept a touch.

arm AUTO: all the lanes accept or refuse a touch, depending on the arming delay.

The lanes status can be selected

- individually: through the Popup menus for the lanes.
- for all lanes: through the menu action of the race dialog.



a) b) c) d) e) f) g)

- a) Lane is not armed (due to arming delay).
- b) Lane is armed (after the arming delay).
- c) Lane is being touched.
- d) Lane is unused.
- e) Lane is not armed (due to user actions).
- f) Lane is armed (due to user actions).
- g) Lane has completed expected laps.

### 5.3.4 *Arm the start*

When the race dialog is created, the start contact is armed.

After a start is received, the start is disarmed.

**Note:** after a false start, to restart the race, just arm the start with the button.

### 5.3.5 *Manual start*

To simulate a start:

- Check that the start is armed.
- Press the <Ctrl> and <Shift> keys
- and click on the status symbol for the start.

### 5.3.6 *Manual time*


To simulate a touch on the touchpad:

- press the <Ctrl> and <Shift> keys
- and click on the status symbol for the desired lane.

Or

- press the <Ctrl> and <Shift> keys
- and press the key '0','1'.....'9' of the desired lane.

### 5.3.7 *Arming delay*

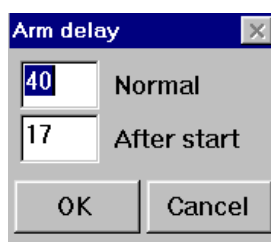

This dialog is accessed from the Race window, with the menu <Options → Arm delay>.

This option controls the automatic arming process.

There are two arming delays to enter:

1. During the race: the arming delay should be a little less than the fastest time a swimmer can swim back and forth along the pool.
2. Just after the start: the arming delay should be a little less than the fastest time a swimmer can swim from the start to the opposite end.

### 5.3.8 *Lane options*

This dialog is accessed from the Race window, with the menu <Options → Settings>.

This dialog sets some options for all lanes.

#### Warning if no time:

Check it if you want to be warned when a swimmer does not get a time (too soft touch, abandon...).

The lane that received a <no time> warning has a blinking time entry.

The reaction when a lane gets a warning should be:

- Get the backup time if available, or make a <Lap +1> if the swimmer does not touch the pad.
- Disarm the lane if the swimmer has abandoned.

---

Erase intermediates after ...:

An intermediate time will be erased from the screen and from the scoreboard after x seconds.

Beep on touch:

If checked, the computer will emit a beep for every new valid time.

A different sound can be played if your computer has a sound device.

**5.3.9      *Next heat and next event***To switch to the next heat:

- Be sure the race dialog is active.
- Select the menu <Actions → Next heat>.

To switch to the next event:

- Be sure the race dialog is active.
- Select the menu <Actions → Next event>.

**5.3.10    *Actions during a race***

<Lap -1>:      Decrement the lap counter and arm the lane.

<Lap + 1>:      Increment the lap counter.

<Edit Finish time>: Launch a dialog to enter the finish time. It is possible to introduce 0.0 for a swimmer who has not finished the race.

<Take Backup time>:

- If the lane is armed <On>, it will take the backup time for the expected lap.
- If the lane is armed <Off>, it will take the backup time for the lap that just occurred.

**Examples:**

- The touchpads are not armed and a swimmer is arriving:
  1. Select the side (if two harnesses);
  2. Popup menu of the lane;
  3. Arm the lane.

**Or faster:**

1. Select the side (if two harnesses);
  2. Arm all the lanes (with the accelerator keys).
- A swimmer arrives, but gives a too soft touch. You want to increment his lap number:
    1. Select the side (if two harnesses);
    2. Popup menu of the lane;
    3. Lap +1.
  - A swimmer arrives, but gives a too soft touch. You want to take the backup time:
    1. If lane is still armed, increment his lap count (see above);
    2. Select the side (if two harnesses);
    3. Popup menu of the lane;
    4. Backup time.
  - A touch has been received before the swimmer arrives. You should decrement his lap number:
    1. Select the side (if two harnesses);
    2. Popup menu of the lane;
    3. Lap -1; (the lane is automatically rearmed, and is ready for the real touch).

### **5.3.11 Retrieve race**

From the <Race> dialog, menu <Actions>.

This action is mainly useful in two cases:

a) You started the wrong race:

1. Quit the <Race> dialog.
2. Connect the actual heat to the <Race> dialog (from the <Timetable> dialog).
3. Select <Retrieve race>.

b) You missed the start:

This means that the heat was not connected to the race when the start occurs.

1. Select <Retrieve race>.
2. View the list of events in the <Events> dialog (<F6>).
3. Select the start event in the list (normally it is the first one).
4. Activate this start (<Actions → Validate>).
5. Return to the <Race dialog> (<F5>).

## 5.4 Result dialog

### 5.4.1 Copy and paste results

These functions may be very useful if you have processed the wrong race. See also <Retrieve race> in the <Race> dialog chapter [5.3.11](#).

For instance, you processed the final A, but in fact it was the final B that took place. So you should move the result from the final A to the final B.

Copy results: Select the heat from which the results should be moved and click on the <copy> menu.

Paste results: Select the heat to which the results should be moved and click on the <paste> menu.

### 5.4.2 Available configurations

The configurations available from the result dialog are:

- Records settings.
- The 'Before the race' records editing.
- End of race actions (for printing).

The result dialog is launched when a heat is being connected to the race. It may also be launched from the <Timetable> window, pushbutton <Result>.

#### End of race:

This dialog is used to view the final and intermediate results. The button <End of race> is used to launch a printed result, or to update a result file. Select the actions to be taken when <End of race> is pressed with the menu <On End of race → Options>.

#### Records:

- Manually set a record:

To manually set a record (e.g. NWR or NER), select the lane in the listbox where the record should appear, and launch the <Records → Options> dialog.

Select a record type in the combo box.

Use the <Clear> or <Set> button to set a record for the selected lane in the <Results> dialog.

- Record detection:

To choose if records should be detected automatically, go to the <Records → Options> dialog.

The program compares the time of the winner and any record of the three levels of records. If the record is beaten, the <new record text> is added after the finish time.

- Record update

The program asks to update the record table when the <End of race> action occurs.

- Edit a record

The records that were valid before the selected race and that appear on the print can be modified with <Records → Edit for print>. Note that the records for the print are updated by the program on <End of race>.

To remove a record for the print, call the edit record dialog, and set an empty text in the time entry (chapter 6).

Disqualifying a lane: enter its number in the <Status → Disqualified> entry field.

### **5.4.3      *End of Race Options (printed results)***

This dialog is accessed from the <Results> dialog, menu <End of race → Options>.

With this dialog, you can select which actions will be done when the button <End of race> of the result dialog is pressed.

**Note:** normally just one box should be checked.

<Direct...>:

- If you have an Internet browser, the program will use it to generate the result page (HTML file). You must select if you want to have preview (HTML preview) or not (HTML) in the combo box on the right.
- Select TXT or TXT Preview to print the result using Notepad program.
- Select %D to save the result in a unique file name in the data directory. The filename will be "sEEERRHH.txt" (EEE: event number, RR round number, HH heat number).

<Print program>: Default.

- the results are sent to the ARES-Print program, which is connected with a DDE interface.

<IF-ARES serial printer>:

- the results are sent to the micro printer that can be connected directly onto the IF-ARES.

<Update result table file>:

- the results are added to a text file that could be imported into a database.

## 6 RECORDS OPTIONS

### 6.1 Editing the records table

To edit the records, go to the main window, menu <Table → Records Table → Edit>.

To add or modify a record, go the records list, click on the <Edit> button.

A record can also be added or modified from the <Race dialog>.

### 6.2 Edit the record from the race dialog

The records for the heat that is on race are displayed on top of the race dialog.

From the race dialog, the menu <Records → Edit> lets you modify or add these records.

To delete a record, call the edit record dialog, and set an empty text in the time entry.

### 6.3 Updating a record

This dialog will appear in 3 cases:

- When editing the records table (Button edit from the record list) (chapter 6.12).
- When editing the record for the race that is active (from the race dialog).
- When a new record is being put automatically in the records table.

Kind of record: There are 3 levels (like WR, ER, NR). The texts for these kinds of records can be edited (for example to use CR in place of ER, etc).

**Note:** For fast editing, you don't need to type the punctuation for the times e.g. you can type <12254> for <1:22.54>

To quit this dialog, press <ESC>.

### 6.4 The record output dialog

This dialog is accessed from the ARES-Swimming window, menu <Configuration → Records output>.

The dialog controls the outputs of the records, and also some other exportation data functions (startlists, ...). This can be used to drive a TV character generator or a Scoreboard.

---

#### Clear Pushbutton:

Send the command to clear the fields depending of the mode definition. This button may be simulated with an external connection on the Line2 input of the IF-ARES.

#### Manual Pushbutton:

Send the data as defined in the mode. This button may be simulated with an external connection on the L3 input of the IF-ARES.

#### Mode:

<Default>: the output is done on IF-ARES SCB port.

Rec1 and Rec2 before the start & before the finish.


Rec1 before the intermediates.

Difference of the time compared with Rec1 after an intermediate.

**Note:** the user can edit his own mode. See *Advanced* in *help file* for the syntax of the configuration file.

<Follows event>: The records are automatically sent.

## 6.5 Record split times

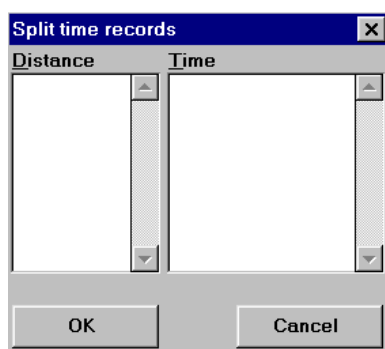

This dialog is used to edit the split times for a record. You can open it in the following way <Table → Records Table → Edit → Edit → Split time records>.

The left-hand list shows the distances, the right-hand list displays the times for each distance.


**Note:** for fast editing, you also do not need to type the punctuation for the times e.g. you can type <12254> for <1:22.54>

When a record is beaten, these lists are automatically modified.

The split times are mainly used with the <Records output > option.



## 7 EVENT DIALOG

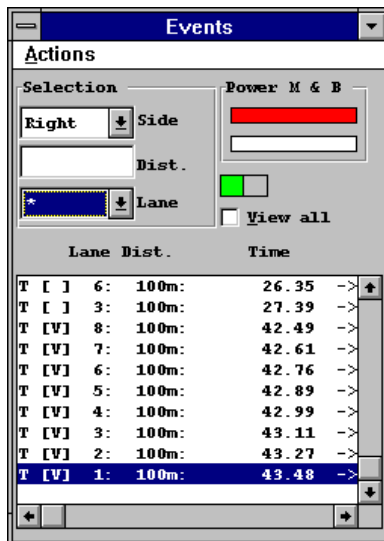

This dialog is accessed from the <ARES-Swimming> window, with the menu <Windows → Events>.

This dialog is used to check all the information that comes from the pool.

This dialog displays a list of all the individual times coming from the pool. The times are assigned to the race that is currently connected to this dialog (it is usually the same race as the one in the <Race> dialog).

When no race is connected, the times are just displayed, but never stored.

This window could be minimized with the accelerator key <F6>.

### Modifying a time:

- Validate: Set the selected time as the significant time for this lap.
- Lap +1: Set the selected time as the significant time for the next lap.
- Lap -1: Set the selected time as the significant time for the previous lap.

### Editing a new time:

A time cannot be changed. But a new time can be added.

Select the side (if two harnesses are used), select the lap and select the lane and then click on the edit menu.

### The list of times:

A line in the listbox appears like this:

<source><status><lane><lap><time><harness>.

the source:

- T : touchpad
- B : manual pushbutton backup.
- <> : false start time for a relay race or reaction time.
- space : other (edited, ...).

the status:

[V] : a valid time.

[V]M : a valid, manually generated time (from the keyboard).

[V]E : a valid, edited time (from the keyboard).

[+] : a time that occurs when the lane was armed, but has been invalidated.

[ ] : a time that is non-significant.

[ ]M : manually generated (from the keyboard).

[ ]E : edited (from the keyboard).


the lap: this is the lap number for this time. A '\*' is added if the lap has been changed for this time.

the time: the time elapsed from the last valid start.

the harness: <-: the time comes from the left harness.

->: from the right harness.

## 8 SCOREBOARD

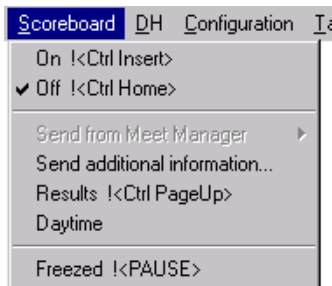

The scoreboard commands are accessed from the ARES-Swimming window.

<On race>: the scoreboard follows the race.

<Send from Meet Manager>: Popup menu which allows to send Startlist, Finish list, Women's scores, Men's scores or Mixed scores from *Meet Manager software* database.

It is only available if a computer running *Meet Manager* is connected to the GP port of the ARES. The ARES software is absolutely transparent and it sends that information in ERTD mode on the ARES scoreboard (SCB) port.

<Send additional information...>: Allows to send additional numbers like team score on a 12<sup>th</sup> line on the scoreboard. This menu is only available in UNT4 modes

<Results>: The scoreboard displays the result of the heat that is connected to the <result> dialog.

To send the first page: Press <Scoreboard → Results>.

If no hold time is set, do the following to send the next page: Press <Scoreboard → Results>.

To resend the first page: Press <Scoreboard → Off> and then press <Scoreboard → Results>.


### Displaying the result of a previous race:

1. On the timetable dialog, select the competition and the heat
2. Uncheck the < 1: follows race>.
3. Click the <Results> pushbutton to connect the selected heat to the results dialog.
4. Set the scoreboard for <Results>.

<Daytime>: Sends the daytime to the scoreboard (do not forget to synchronize the IF-ARES !!).

<Freezed>: Freezes the current result on SCB (use this option between each event to let results on scoreboard).

#### Configuration from the setup window:

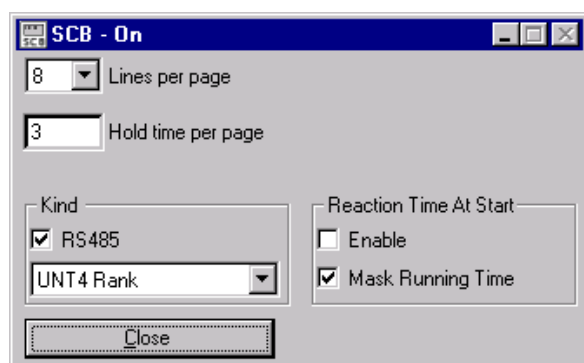

The Scoreboard setup dialog is accessed from the ARES-Swimming window, menu <Configuration → Scoreboard >.

<Number of lines>: This setting is useful to send the results page by page.

Hold time: For scoreboards that have fewer lines than there are lanes in the pool, it is possible to send the result page by page. A hold delay in seconds can be entered. If no time is set, the following page is sent on the <Result> actions.

Kind of scoreboard: Select the kind of scoreboard you have:

- GALACTICA Scoreboard (chapter 9)
- ERTD Scoreboard (chapter 10)

<RS485>: means that the data for the SCB is also sent to the RS485 pins of the SCB connector on the IF-ARES.


**Note:** The output on the 20mA pins is always active, no matter if the RS485 is checked or not.

Reaction Time At Start: *Enable check box* option allows you to show the reaction time when competitors left the platform, and the option *Mask Running Time check box* removed running time on scoreboard when the first reaction time is displayed.

The SCB output protocol is provided for free in our web site ([www.swisstiming.com](http://www.swisstiming.com)) in the ARES Download section.

## 9 DH CONTROL

The DH commands are accessed from the ARES-Swimming window.

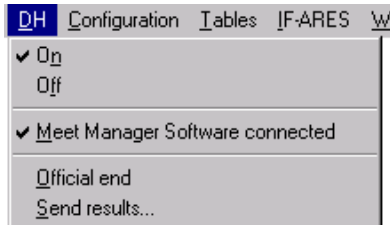

<On race>: the DH output follows the race.

<Meet Manager Software connected>: This item is automatically checked if a computer running *Meet Manager software* is connected to the GP port of the ARES and if it has made a *Timing Consol Test*.

<Send results>: the DH output sends the result of the heat that is connected to the <result> dialog.

The DH-Send results dialog is accessed from the ARES-Swimming window, menu <DH → Send results>.


<With backup>: check it if you want the backup time to be sent.

The GP output protocol is provided for free in our web site ([www.swisstiming.com](http://www.swisstiming.com)) in the ARES Download section.

### 9.1 Data Handling Options (from version 2.15)


The data handling communication can be done through two different channels:

- via a serial port on the ARES PC. [from revision 2.15]
- via the IF-ARES GP port

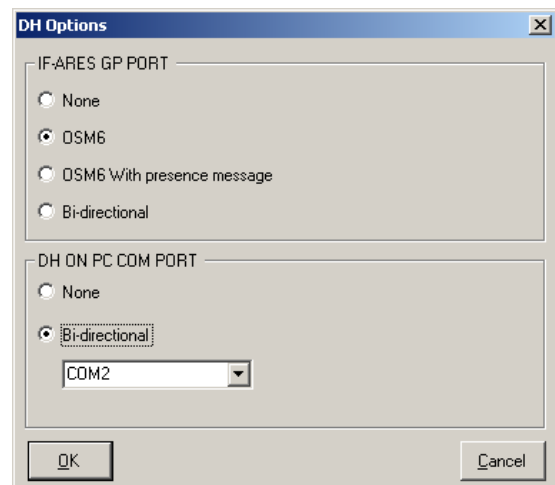

### 9.1.1 DH Connection via the ARES PC secondary com port

If the ARES PC has two serial ports (COM1 and COM2), one of them is always used to link the PC to the IF-ARES. The other one can be used to link ARES to a data handling PC.

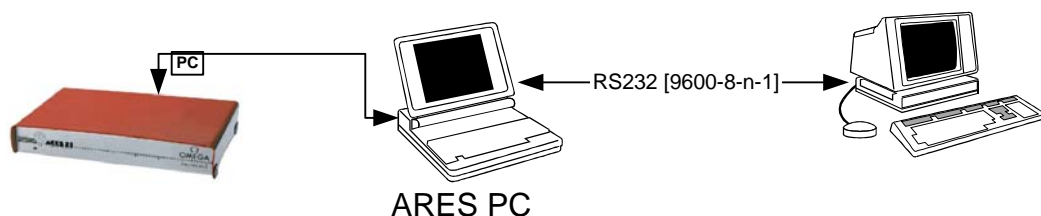


A null modem cable can be used or alternatively a 3 ways cable as described in the following table.

Cable socket DB9 Female	Cable socket DB9 Female
pin 2 (RX)	pin 3 (TX)
pin 3 (TX)	pin 2 (RX)
pin 5 (GND)	pin 5 (GND)

### 9.1.2 DH Connection to the IF-ARES GP port

To connect the IF-ARES GP port to a Data Handling PC, a RS485 - RS232 Converter is required.

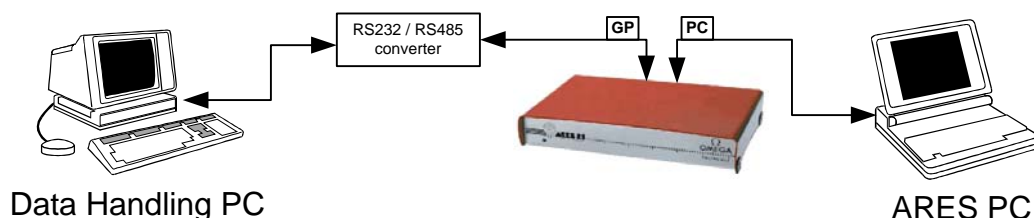

The cabling to that converter is described in the table below:

Cable plug IF-ARES end	CONVERTER		Cable socket PC end
DB9 Male	RS485	RS232	DB9 Female
pin 2 * (RX+)	TX +	RX	pin 3 * (TX)
pin 3 (TX+)	RX +	TX	pin 2 (RX)
pin 6 *(TX-)	TX -	GND	pin 5 (GND)
pin 7 (TX-)	RX -		
* can be omitted in OSM6 mode			

The serial port settings are preset by the software (see also configuration->serial port->DH)

OSM6 types: 9600 7 even 1

Bi-directional type: 9600 8 none 1.

## 10 GALACTICA SCOREBOARD

### Startlists:

The startlists are sent to GALACTICA (Swimming interface) through the option "Record Outputs".

The startlists may be sent all in one shot or individually.

### How to send all the startlists:

Activate <The record output dialog > (chapter [6.4](#)).

Select the mode "GALACTICA Startlist".

Press the "Manual" pushbutton to send the startlists. In GALACTICA, the swimming interface displays the names as they come in.

### How to send a startlist for one race:

Activate the <Race dialog> (chapter [5.3](#))

Activate <The record output dialog > (chapter [6.4](#)).

Select the mode "GALACTICA Startlist".: cur. Heat".

Press the "Manual" pushbutton to send the startlists. In GALACTICA, the swimming interface displays the names as they come in.

## 11 ERTD SCOREBOARD

The ERTD type is designed to drive DAKTRONICS scoreboards running with the VENUS software. For these kinds of scoreboards, the startlists are sent at the launch of each race (when the Race dialog is open, or when a Next Heat command is given).

The refresh of the scoreboard may be done with the SCB-On and SCB-OFF commands.

## 12 TEXT MODIFICATION

### 12.1 Text modification of the definition of competition

In the *swimm*-folder you can find files of languages (\*.tx0 *English*, \*.tx1 *Français*, \*.tx2 *Deutsch*, \*.tx3 *Italiano*, \*.tx4 *Español*) that you can edit and modify without problem. If these files do not exist, you have to create them for example with the help of notepad.

### 12.2 Text modification of interface

You have the possibility to redefine the different messages that appear on the screen. To do this you have to open the *swimm.ms0*-file in the *swimm*-folder for example with help of notepad, copy the line of the message that you want to change, close the file **Attention:** **do not make modifications in this file!**, create the new file, paste in the line and then change the text.

Save the file under the name of *user.msg*. All your modified texts should be found in this file.



---

## 13 GLOSSARY

### backup button



Competition: a competition is a group of heats.

Data directory: this is the directory where all the results, the configuration, competitors and records tables are stored.

There is also a copy of the default tables (style, round, length, category) for the selected language.

Default directory: this is the directory where the program resides. It contains all the default tables, in all the supported languages

LED: this is small red lamp in front of the IF-ARES.

ARES Module: a piece of software that is active in the IF-ARES. It should have been downloaded from the PC using the <Download program>. Latest version of ARES Module is provided for free in our web site ([www.swisstiming.com](http://www.swisstiming.com)) in the ARES Download section.

### platform



### touchpad





